Lites

HPLED DE 1-T
Tunable

Owner's and service manual

Retrofit for Fresnel
LEONARDO 1000 cod. 310-311 (De Sisti)

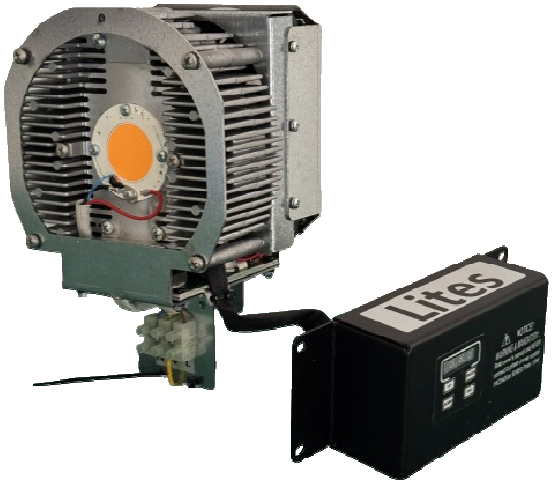

Read this manual totally and carefully follow all the instructions contained. File this manual for future use
It is essential to read all the information contained to ensure correct installation, service and full operation of the HPLED DE 1-T
All operations must be accomplished, handled and carried out by qualified personnel only
NOT COMPLYNIG WITH GIVEN NOTICE IT WILL VOID WARRANTY AND WILL FREE THE MANUFACTURER OF ANY KIND OF RESPONSABILITY AND LIABILITY.

www.litessrl.com

Unpacking

Unpack the carton and gently remove HPLED DE 1- T from the box. Ensure HPLED DE 1- T is received in all its parts.In the event the HPLED DE 1-T shows any damage, do not use it and contact immediately your transporter as well as your seller.
Items in the carton consist of:
- N. 1 HPLED DE 1-T unit
- N. 4 Ø 4 mm washers
- N. 4 M4 screws
Installation, utilisation and service ownerr's manual.

General Information and recommendation to operate the unit in good and safe conditions.
Follow instructions with care and attention:
HPLED DE 1-T must be used and housed only and exclusively for the 1000W Leonardo unit (code 310 – 311)

The HPLED DE 1-T unit must NEVER be used unless it is housed in one of the models listed above. (Fresnel Leonardo cod. 310-311).

HPLED DE 1-T fixture is only meant for professional use. NEVER use it for domestic or other improper use.
Minimum distance from any flammable source is of 0.25m.
Minimum throw distance from illuminated surface: 0.5m.
The installation of the unit(s) (prior to installation, the HPLED DE 1-T unit must be housed in one of the De Sisti luminaires listed above), the housing of the external fixture body, must be secured with suitable clamps, safety cords and adequate protection.
Install HPLED DE 1-T in ventilated ambient which temperature must not exceed 35°C
HPLED DE 1-T is NOT for domestic use, HPLED DE 1-T can only be used for professional applications.
When HPLED DE 1-T unit is operated, some outer parts of the profile can reach temperatures of up to 60C°
HPLED DE 1-T must be fitted with protection shields (Lenses)
On no account, directly or indirectly, LED must be touched as it may impair its use.
An Essential and Periodically throughout cleaning of the HPLED DE 1-T is recommended. This practice avoids that layers of dust and other impurity jeopardise and reduce the correct operation of the unit. Lenses must be cleaned to remove layers of dust that may impede and or reduce the passage of the light through the lenses. The correct and periodically maintenance keeps also fans and vents clean thus keeping the HPLED DE 1-T in its best performance conditions. Never touch, directly or indirectly, the Yellow core of the LED nor use solvents that can damage the LED irremediably. Protection shields if battered/worn, must be replaced with new ones (Lenses)

Warning from electric shocks

All operations must be accomplished, handled and carried out by qualified personnel only
Warning High voltage hazard, always disconnect Power before any handling and any servicing of HPLED DE 1-T

Do not and never handle HPLED DE 1-T with humid/wet hands or near to any water or any kind of moisture sources
Always connect HPLED DE 1-T to mains fitted with safety device switch that cuts power off in case of danger
The HPLED DE 1-T does NOT and CAN NOT be operated via Phase control dimmer nor connected/operated in NON-DiM mode

HPLED DE 1-T is rated Class I

Earth connection is mandatory!

CE Approvals

The HPLED DE 1-T products to which this manual refers to, complies with European directive pursuant to:
2014/35/EU safety of electrical equipment supplied at low voltage (LVD)
2014/30/EU Electromagnetic compatibility (EMC)
2011/65/EU Restriction of the use of certain hazardous substances (RoHS)

WARRANTY!

A 24-month warranty is granted on the HPLED DE 1-T from purchase's date. Warranty covers fabrication defects only. Warranty is immediately voided if the HPLED DE 1-T has been handled by unqualified personnel. Any improper and unauthorised use, such modification(s) or misapplication of the HPLED DE 1-T will also void the warranty of the product(s). Silver colour label showing technical data and serial number, if removed or if data are impaired to render details illegible, it will immediately void the warranty

Technical specifications

Power Supply	100-240 V~ 50/60Hz
Maximum power consumption	170W
Stand-by power consumption	5W
Minimum ambient temperature	-10°C
Maximum ambient temperature	35°C
LED Colour Temperature:	3000°K - 5700°K
LED CRI	96 (3000°K) and 94 (5700°K)
LED Life	(see Manufacturers ' specifications)
Weight	2,2 Kg

IP20 rating: To be housed into original Fresnel Leonardo 1000w De Sisti (cod.310-311) series

Data connectors	IN & OUT XRL5
Data protocols	DMX 512; RDM ready
User interface	4-digit display and 4 buttons
Manual operation:	Users must operate via buttons provided on the display
Fan control:	Fan speed adjustment
Control of LED frequency:	Selection of LED frequency refresh
2 Dimming curves control:	Selection of four dimming curves control

CE compliant

Dimensions (see picture):

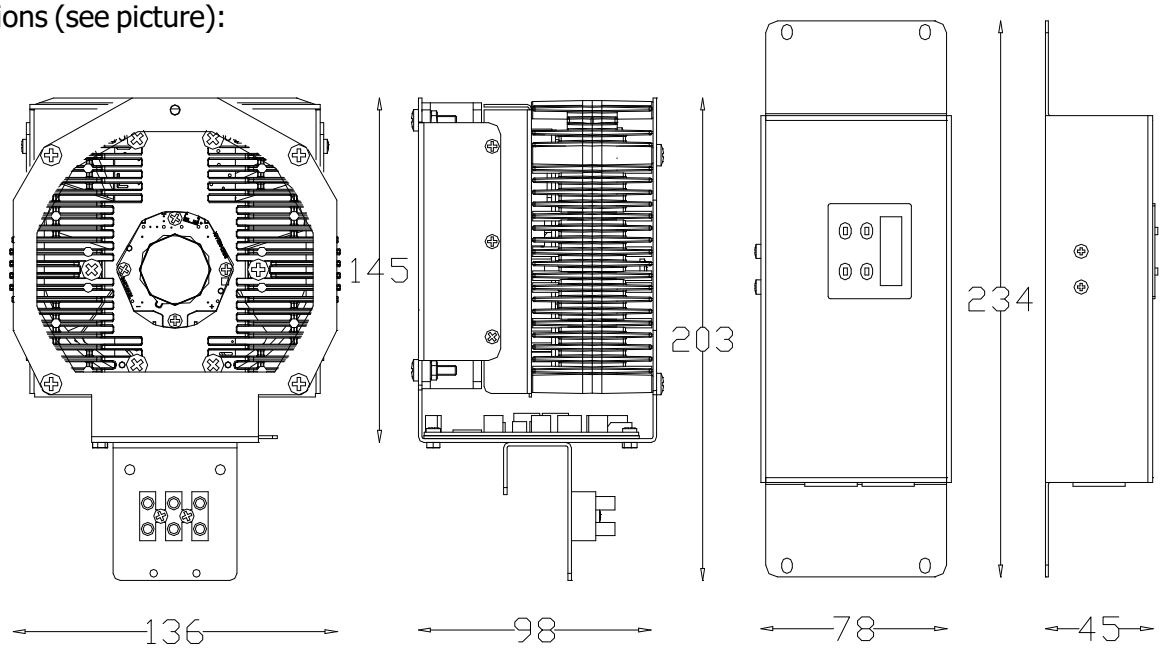

⚠ It is mandatory to disconnect power from mains during the whole process installation of the HPLED DE 1-T module.

The HPLED DE 1-T module has been designed to replace the halogen lamps used in De Sisti Fresnel projectors, Leonardo 1000 W models (code 310 and 311). Place the projector on a flat surface with the underside facing upward (Fig. 1). Unscrew the four M4 screws securing the lamp carriage box. Rotate it by 90° and remove the carriage box from the projector (Fig. 2). Remove the mirror holder support and the G22 lampholder. Unscrew the two M4 screws securing the mirror holder support (Fig. 3) and the M4 screws securing the lampholder to the carriage (Figs. 4, 5, 6). Using a drill with a 20/25 mm drill bit, make a hole in the carriage box at the indicated dimensions (Fig. 7). Take the HPLED DE 1-C6 module and connect the power supply cables to the three-pole terminal block (Fig. 8). Secure the power cables using the supplied cable tie. Check that the cables connected to the terminal block have sufficient length when the carriage is moved fully forward and fully backward.

Connect the ring terminal of the ground cable by loosening the M4 screw (see Fig. 9), together with the ground cable already fitted to the carriage. Secure the HPLED DE 1-T module to the carriage using the four M4 Allen screws (Figs. 10–11). Pass the DMX cables and the ribbon cable supplying the display through the previously drilled hole. Connect the ribbon cable to the display and the DMX connector to the HPLED DE 1-T display box (Fig. 12). Secure the signal cables using the supplied cable tie. Remove the four side screws from the carriage box and fix the display box to the projector carriage box (Fig. 13). Insert the assembled carriage box into the Fresnel projector and rotate it by 90° (Fig. 14). Secure the carriage box using the four M4 screws (Fig. 15). It is recommended to remove the protective mesh located near the Fresnel lens in order to achieve better light output and improved cooling.

Fig.1

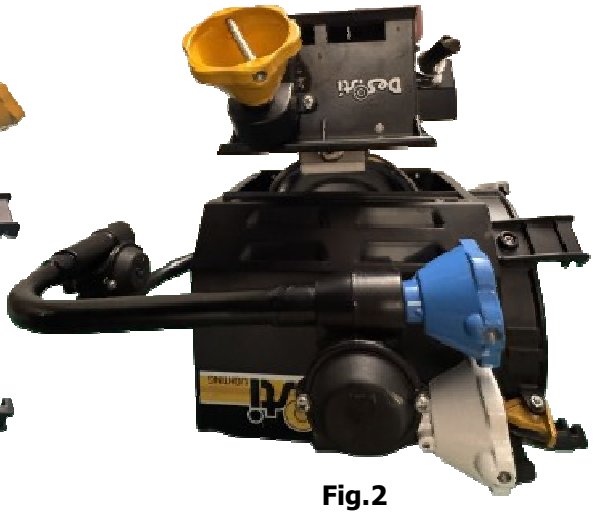

Fig.2

Fig.3

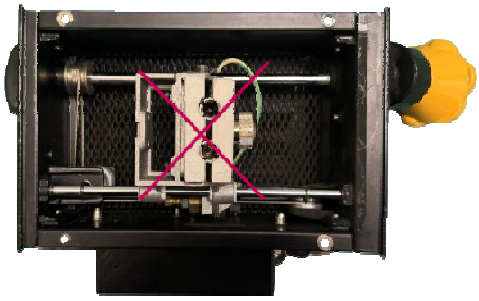

Fig.4

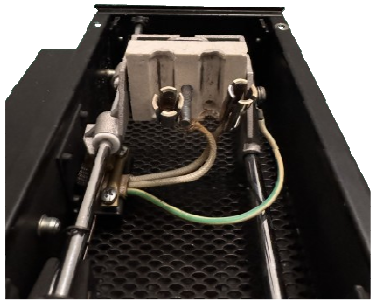

Fig.5

Fig.6

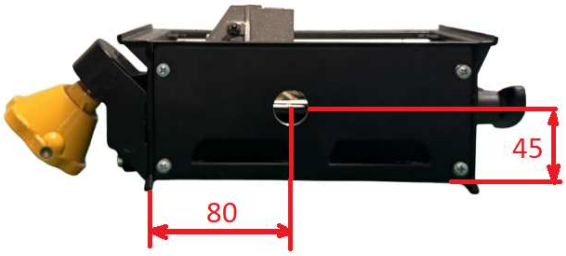

Fig.7

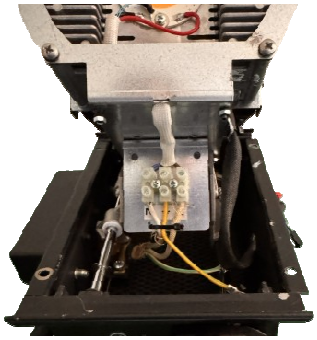

Fig.8

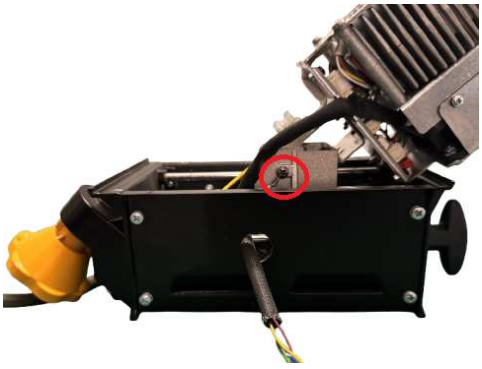

Fig.9

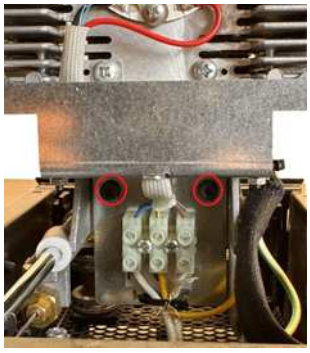

Fig.10

Fig.11

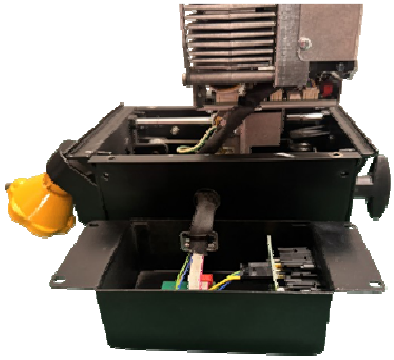

Fig.12

Fig.13

Fig.14

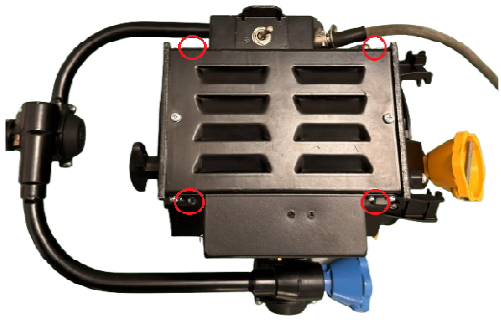

Fig.15

⚠ Connection to mains

<u>WARNING ! Installation(s) must be accomplished, handled and carried out by qualified personnel only and must comply with all norms in force in the installation's country</u>

Power up the projector using the supplied cable.

<u>⚠ WARNING:NEVER CONNECT HPLED DE 1-T ENGINE TO ANGLE PHASE DIMMER PACK NOR TO NON-DIM MODE</u>

Signal control connection

HPLED DE 1-T can be operated via either DMX512A and or RDM ready Protocols.
For Daisy chain DMX line use a-2 lead wire plus shield.

Important note: when DMX is available a red dot will illuminate on the right hand of the display.When red dot is off no DMX signal is available.

XLR5 connector connection	
pin	Description
1	GND
2	DMX-
3	DMX+
4	Not connected
5	Not connected

Power HPLED DE 1-T ON

<u>WARNING ! Before powering HPLED DE 1-T ensure that all installation(s) procedure(s) have(s) been properly set and accomplished.</u>

When HPLED DE 1-T is powered the setup display will show the software release version. The UP, DOWN, ENTER and ESC buttons will allow for the operations of HPLED DE 1-T menu. UP and DOWN buttons allow to browse through menu options, the ENTER button is to confirm selection. The ESC button is to return to the previous menu or to quit previous setting(s).

RDM – Remote Device Management

RDM Controller allows for remote standard operations
RDM default options include:
Discovery mode: RDM is engaged when controller incepts this mode, the device
reports itself by giving a flash of light (Controller sets the device in a listing to read: settings, DMX address, personality settings, (Read all DMX mode including all DMX channels above)
ON/OFF "Identify": This mode is used to identify the manufacturer's device (Lites srl). It gives a flash of light from the LED
Model information (HPLED-dU)
Software version information (HPLED-dU v.x.xx)
Mode to reveal temperatures of the LED and of the driver
Mode to reveal hour-meters of the LED and of the device

The device allows RDM protocol, ANSI E1.20–010 version

RDM Device Model ID
5445:1214xxxx

The following parameters are allowed:

Denominazione Plasa/ESTA	*RDM PID Value*	*Get*	*Set*	*Descrizione*
CATEGORY – NETWORK MANAGMENT				
DISC UNIQUE BRANCH	0x0001			Message related to Discovery RDM process
DISC MUTE	0x0002			Message related to Discovery RDM process
DISC UN MUTE	0x0003			Message related to Discovery RDM process
CATEGORY – RDM INFORMATION				
SUPPORTED PARAMETERS	0x0050	X		List of allowed parameters
PARAMETER DESCRIPTION	0x0051	X		Parameters description *Manufacturer specific*
CATEGORY – PRODUCT INFORMATION				
DEVICE INFO	0x0060	X		Reading of following parameters: - Protcol RDM version - Device Model ID - Product category - sw version ID - number of DMX channels - DMX mode index - DMX address - number of sensors
DEVICE MODEL DESCRIPTION	0x0080	X		Text description *device model* **HPLED-II-DW**
MANUFACTURER LABEL	0x0081	X		Text description *manufacturer* **LITES**
SOFTWARE VERSION LABEL	0x00C0	X		*Text description sw version* **HPLED-II-DW v.1.xx**
CATEGORY – DMX512 SETUP				
DMX PERSONALITY	0x00E0	X	X	DMX mode setting
DMX PERSONALITY DESCRIPTION	0x00E1	X		Text description DMX mode
DMX START ADDRESS	0x00F0	X	X	DMX address setting/reading
CATEGORY – SENSORS				
SENSOR DEFINITION	0x0200	X		Value related to the sensor
SENSOR VALUE	0x0201	X	X	Parameter for the visualisation of values read by [Board / Led Temperature °C]
CATEGORY – DIMMER SETTINGS (ADDITIONAL MESSAGES)				
CURVE	0x0343	X	X	Parameter for gamma correction (gamma) selection
CURVE DESCRIPTION	0x0344	X		Description of gamma correction parameter
OUTPUT RESPONSE TIME	0x0345	X	X	Parameter related to output smoothness (smooth)
OUTPUT RESPONSE TIME DESCRIPTION	0x0346	X		Output smoothness parameter description
MODULATION FREQUENCY	0x0347	X	X	Parameter related to the selection of pmw signal frequency
MODULATION FREQUENCY DESCRIPTION	0x0348	X		Description of parameter related to the selection of pmw signal frequency
CATEGORY – POWER/LAMP SETTINGS				
DEVICE HOURS	0x0400	X		Parameter related to the reading of device lifespan
LAMP HOURS	0x0401	X		Parameter related to the reading of maximum value hours of led ignition [max between LED1...LED6]
CATEGORY – CONTROL				
IDENTIFY DEVICE	0x1000	X		Flashing LEDs to allow visual identification of the device
CATEGORY – MANUFACTURER-SPECIFIC PIDs				
BOOST	0x9000	X	X	Read/Write BOOST value
FAN MODE	0x9001	X	X	Read/Write FAN MODE value

RDM Parameters – Values

Name	*Valid Values*	*Value Description*
ADDITIONAL MESSAGES		
CURVE	1 2 3 4	Read / Write GAMMA value **1 =** LINEAR **2 =** QUADRATIC [DEF] **3 =** S-CURVE **4 =** GAMMA 2.2
OUTPUT RESPONSE TIME	1 2 3 4	Read / Write SMOOTH value **1 =** SMOOTH 0 → FAST [250 ms] **2 =** SMOOTH 1 → MEDIUM [450ms] [DEF] **3 =** SMOOTH 2 → SLOW [800 ms] **4 =** SMOOTH 3 → SUPER FAST [15 ms]
MODULATION FREQUENCY	1 2 3 4 5 6 7 8 9 10	Read / Write PWM FREQUENCY value **1** = 1 kHz **2** = 2 kHz **3** = 3 kHz **4** = 4 kHz **5** = 5 Hz **6** = 6 kHz **7** = 7 kHz **8** = 8 kHz **9** = 9 kHz **10** = 10 kHz [DEF]
CATEGORY – MANUFACTURER-SPECIFIC PIDs		
BOOST	0 1	Read/Write BOOST value **0** = OFF [75%] [DEF] **1** = ON [90%]
FAN MODE	0 1 2 3	Read/Write FAN MODE value **0 =** AUTO **1 =** MEDIUM HIGH [DEF] **2 =** MEDIUM LOW **3 =** LOW

Menu items

<table>
<tr><th>Displayed Message</th><th>Allowed or displayed values</th><th colspan="2">Function</th></tr>
<tr><td>Addr</td><td>001..512</td><td colspan="2">Set Up DMX Address</td></tr>
<tr><td rowspan="2">Auto
(Automatic mode)</td><td>3000
3100
3200
3400
3600
4000
4400
4900
5300
5500
5600
5700</td><td>Preset 1 White 3000°k
Preset 2 White 3100°k
Preset 3 White 3200°k
Preset 4 White 3400°k
Preset 5 White 3600°k
Preset 6 White 4000°k
Preset 7 White 4400°k
Preset 8 White 4900°k
Preset 9 White 5300°k
Preset 10 White 5500°k
Preset 11 White 5600°k
Preset 12 White 5700°k</td><td>Values between 3000 through 5700 allow for fixed white set-up without DMX 512 protocol signal. When fixture is turned, the last selected preset will be held. By pressing the Enter button, "U" appears on the display and using the UP and Down buttons you can adjust the white tone. By pressing the ENTER key, the message D will appear and by using the UP and Down keys it will be possible to adjust the output brightness from 0 to 255. Once the preset has been modified, the dot at the bottom right of the display will flash.</td></tr>
<tr><td>Pr01
Pr02</td><td>Program 1: auto
Program 2 : auto</td><td>Automatic mode without DMX 512 Protocol signal. Program selections run between Pr01 through Pr 02 Both programs can be modified. To change program select Enter then view (Scn0…Scn9; max scenes of each program). Clicking on enter once more it shows P.00.0 (time) followed by F.00.0 (speed) and ultimately the last view shows 1c.01… though c12 (colour to be assigned to each scene) The use of UP/Down keys allow for setting values. When selections are completed press enter to confirm</td></tr>
<tr><td>MaSL</td><td>Master Mode</td><td colspan="2">The Master Mode uses the same settings as the Auto Menu. The only exception is that when all fixtures are connected to DMX 001 in daisy-chain, they perform the same presets and or the same presets selected on the Master fixture. .(Slave devices must be set in Mode 2ch)</td></tr>
<tr><td rowspan="5">Mode</td><td>2 ch</td><td>3000/5700 °K</td><td rowspan="5">Dmx mode (view next page)</td></tr>
<tr><td>2 ch (D)</td><td>3000/5700°K -dimmer (default)</td></tr>
<tr><td>3 ch</td><td>3000/5700°k-dimmer- strobo</td></tr>
<tr><td>4 ch</td><td>3000/5700°k-dimmer16(bit) strobe</td></tr>
<tr><td>9 ch</td><td>3000/5700°k setting options</td></tr>
<tr><td>drUt</td><td>..°C</td><td colspan="2">Shows driver operating temperature</td></tr>
<tr><td>LEdt</td><td>..°C</td><td colspan="2">Shows leds operating temperature</td></tr>
<tr><td>PUM</td><td>0..100%</td><td colspan="2">Shows current led power (0-100%)</td></tr>
<tr><td>SMOO</td><td>SFSt
FAST
MED
SLOW</td><td colspan="2">DMX data Speed adjustment</td></tr>
<tr><td>GAMM</td><td>qUAd
SCUr
qUAd2
LInE</td><td colspan="2"> 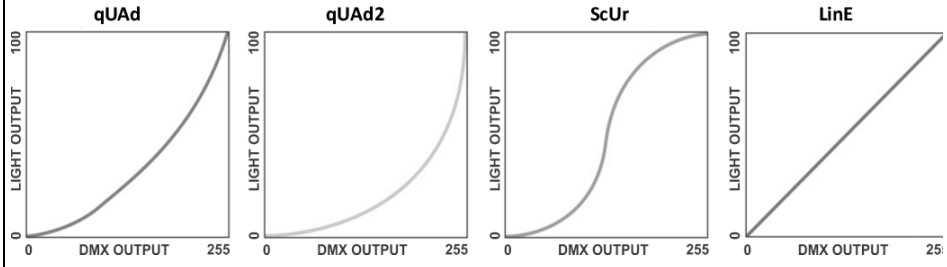

Dimming curves available</td></tr>
</table>

FREQ	1K 2K 3K 4K 5K 6K 7K 8K 9K 10K	LED operation frequence
booS	Off on	When OFF, LED max flux : 90% When ON, LED max flux : 100%
FAn	Aut MEDH MEDL LOW	4 fan operating modes i.e atuomatic, medium fast, medium slow, slow speed. Fan speed adjujstments (fan-sound) reflect on self-correct output LED brightness and other factors as room-temperature, number of engaged channels
PoS	AA VV	Display orientation selection: AA = normal VV = inverted
StbY	Off on	Standby display activity: off = display always switched on = display switched off after few seconds of buttons inactivity (only the right side dot will be lighted to indicate DMX availability)
dEF	Off on	ON Will restore the default factory values
SoFt		Shows Software version

DMX Operating Modes (Mode)

Selecting 1 of the 5 available modes it enables the number of channels required, and its relevant modes, needed to operate HPLED DE 1-T.

mode U2 ch white independents

Ch	Function	dmx levels	
1	3000°k White	0..255	From 0 to max 255
2	5700°k White	0..255	From 0 to max 255

mode 2 ch (default)

Ch	Function	dmx levels	
1	3000°k-5700°k	0..255	When set to level 0 = 3000°k – When set to level 255 = to 5700°k
2	dimmer	0..255	From 0 to max 255

mode 3 ch dimmer

Ch	Function	dmx levels	
1	3000°k-5700°k	0..255	When set to level 0 = 3000°k – When set to level 255 = to 5700°k
2	dimmer	0..255	From 0 to max 255
3	shutter	0-15	Strobe disengaged
		16..255	Strobe from slow (16) to fast (255)

mode 4 ch dimmer 16 bit

Ch	Function	dmx levels	
1	3000°k-5700°k	0..255	When set to level 0 = 3000°k – When set to level 255 = to 5700°k
2	dimmer	0..255	From 0 to max 255
3	Dimmer fine	0..255	From 0 to max 255
4	shutter	0-15	Strobe disengaged
		16..255	Strobe from slow (16) to fast (255)

mode 9 ch "w9ch" (setting options)

Ch	Function	dmx levels	
1	3000°k White	0..255	From 0 to max 255
2	5700°k White	0..255	From 0 to max 255
3	dimmer	0..255	From 0 to max 255
4	Dimmer fine	0..255	From 0 to max 255
5	shutter	0-15	Strobe disengaged
		16..255	Strobe from slow (16) to fast (255)
6	DMX data Speed adjustment	0..24	values selected from display
		25..74	SLOW
		75..124	MED
		125..174	FAST
		175..224	SFAST
		225..255	(reserved)
7	Dimming curves available	0..24	values selected from display
		25..74	qUAd
		75..124	SCUr
		125..174	qUAd2
		175..224	LInE
		225..255	(reserved)
8	Frequency Modulation (LED PWM Freq.)	0..39	values selected from display
		40..54	(reserved)
		55..69	PWM Frequency 1KHz
		70..84	PWM Frequency 2KHz
		85..99	PWM Frequency 3KHz
		100..114	PWM Frequency 4KHz
		115..129	PWM Frequency 5KHz
		130..144	PWM Frequency 6KHz
		145..159	PWM Frequency 7KHz
		160..174	PWM Frequency 8KHz
		175..189	PWM Frequency 9KHz
		190..204	PWM Frequency 10KHz
		205..219	(reserved)
		220..255	(reserved)
9	BOOST	0..24	values selected from display
		25..124	OFF
		125..224	ON
		225..255	(reserved)

Error messages

In case of malfunction, the following messages can be shown:
HP Fan Error: means problems on fan
Temperature Error: LED sensor might be defective and or temperature has trespass threshold limit
Should any of the above given messages occur, the LED will automatically switch off. Refrain and halt the use of the HPLED DE 1-T and promptly contact any authorized service centre.

Periodical maintenance

To ensure the correct HPLED DE 1-T operation, we suggest the following periodical maintenance operations:
Remove dust or any kind of other dirt from the fans and loop-holes, this operation ensures the correct air flow. Remove dust from lenses using a clean cloth. This will ensure the maximum light efficiency
Replace damaged protection screen and lenses when necessary

Do not touch nor clean the LEDs nor the surrounding area with solvent

Device disposal information

At the end of its life, HPLED DE 1-T must be disposed to an appropriate electrical and electronic equipment waste collection centre. Eco-friendly disposal, helps to avoid possible negative impact on the environment and human health and promotes the reuse and/or recycling of the materials making up the product. Illegal disposal involves administrative sanctions provided by laws enacted.

Note

Manufacture declines any sort of personal/corporate responsibility/liability for damages caused by people that are not scrupulously following indications given in this manual as for the inadequacy or for misuse of the product they do, as well as if the product has been handled by unqualified personnel. Not complying with security norms/periodical maintenance and all information contained and as expressed in the owner's/service manual will also totally free personal/corporate responsibility/liability. Text, wordings, drawings, specifications, modifications and other changes of this manual may apply anytime without notice. The specifications are not binding.